

HONDA SilverWing KEIHIN

For ASW-NEXT

Short User Manual

Immo


 *Tools.it*

October 2023


Technical support: asw_support@immo-tools.it

1. How to connect?

SilverWing 600

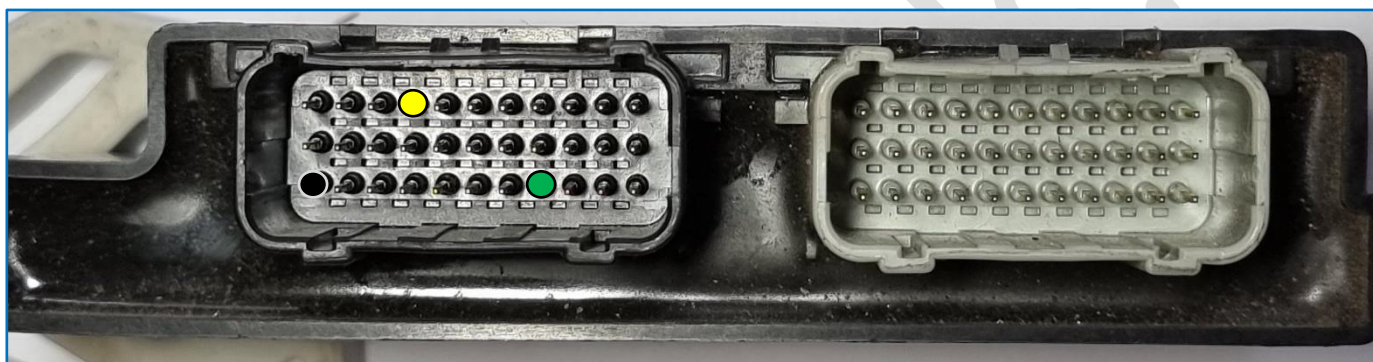

SilverWing 400

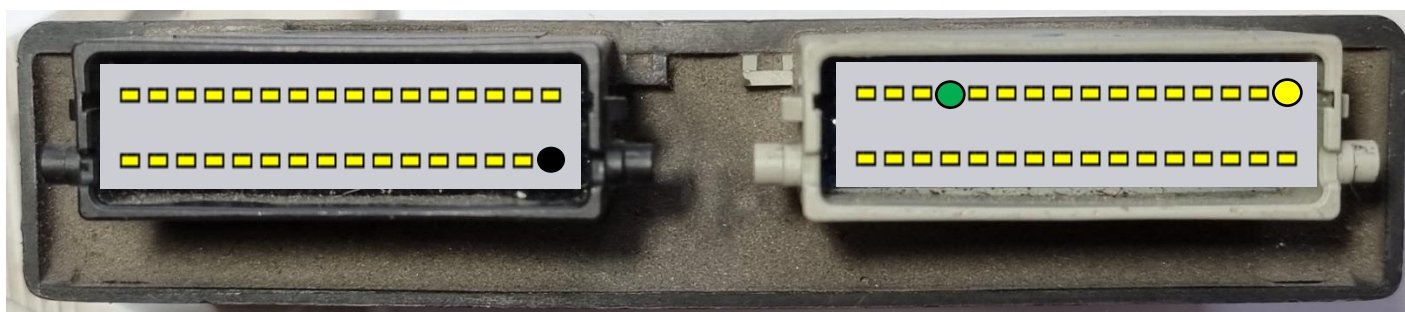

2. What's next?

- According to pinout picture connect ASW-NEXT cables to ECU
- Run PC software
- Connect USB cable from interface of ASW-NEXT to PC
- Apply +12V power to crocodile clips of ASW-NEXT

NOTE: ECU must be supplied by yellow wire [+12V_OUT] from ASW-NEXT interface. Software of ASW-NEXT must be able to switch on/off power to ECU to establish diagnostic connection.

Software features:

- ✓ **Read** EEPROM 93C56
- ✓ **Write** EEPROM 93C56

NOTE: EEPROM area, containing immobilizer data (0180-01FF) is write-protected and cannot be reprogrammed by K-Line.